



# User Manual

*Thank you for your purchase and we care about your experience.*

Dear Philips product owner,

Thank you for your confidence in Philips and purchase of a Philips USB flash drive. This USB flash drive is a great solution for storing and exchanging your files effortlessly. You can simply plug and play. This drive is engineered to offer outstanding performance with enhanced durability.

We are confident it will satisfy your needs.

You are entitled to protection by one of our comprehensive warranties and service networks. If you have any questions about this USB flash drive, please contact the store where you purchased the product, send an email to [philips@leligroup.eu](mailto:philips@leligroup.eu) or visit [www.philips.com/support](http://www.philips.com/support).

We kindly ask you to read this user manual carefully before you use the product.

Thank you for buying a Philips product, we wish you much pleasure in using it.

# Contents

- 1. Specifications .....4
- 2. How to use.....4
  - How to disconnect the USB drive..... 5
  - How to format the USB drive ..... 6
  - Supports..... 6
- 3. Notes ..... 7
- 4. Environmental information .....8
  - Disposal of your old product ..... 8
- 5. Compliance.....9
  - Compliance with CE..... 9
  - Compliance with FCC..... 9
  - Social Compliance .....10

# 1. Specifications

Model number: FM32DC152B  
Descriptions: Philips USB flash drive  
Capacity: 32GB  
Interface: USB 3.1 – USB C

## 2. How to use

PC:

1. Turn the protective cap to leave the USB 3.1 connector open.
2. Connect the USB drive to the USB port of your device.
3. A software package will automatically start up enabling you to activate various applications.
4. Do not remove the USB flash drive from the computer USB port while copying and saving data otherwise the drive will no longer be recognized by your system.

Mobile devices:

1. Turn the protective cap to leave the USB C connector open.
2. Connect the USB drive to the USB C port of your device.
3. If it is connected successfully, the USB icon will show up on your mobile device.
4. Click on the USB icon or open the app of File management, you will find the folder of the Philips USB flash drive.
5. Select the images, videos, music or files from your mobile device, choose “copy to” or “move to”. Afterwards, select the Philips USB flash drive in order to copy or move the data to the USB flash drive.
5. Please note that the interface might be slightly different according to the OS of your mobile devices.
6. Do not remove the USB flash drive from the mobile device while copying and saving data otherwise the drive will no longer be recognized by your system.

## How to disconnect the USB drive

When you are copying files to the USB drive, it is possible that the data copying process has not been fully completed. In order to be sure that you have finished the process, it is recommended to safely disconnect the USB drive with the following steps.

• Windows XP and higher:

1. Go to “This PC”.
2. Right click the USB drive.
3. Select “Eject”.
4. After a message of “Safe to Remove the Hardware” pops up, remove the USB flash drive from the computer’s USB port.

• Mac OS 9.0 and higher:

1. Drag the drive’s icon to the “Trash”.
2. After confirming that the USB flash drive is in standby mode, remove the USB flash drive from the computer’s USB port.

• Android 4.0 and higher:

1. Click on the “Eject icon” on the “File management”.
2. Or select “Eject” on the USB icon. After a message of “Safe to Remove” pops up, remove the USB flash drive from the computer’s USB port.

## How to format the USB drive

Formatting the USB drive can help you to define the file system and quickly erase the data previously stored in the drive. In case you wish to format the USB drive, please follow the below instructions.

1. Go to “This PC”.
2. Right click the USB drive.
3. Select “Format...”.
4. Select the file system you need, and then select “Start”.

• Please note that formatting the USB drive will erase all data on the USB drive and the data cannot be restored.

## Supports

- USB 2.0, USB 3.0, USB 3.1 and USB 3.2 ports
- Windows® XP and higher
- Mac OS 9.0 and higher
- Linux 2.4.0 and higher
- Android™ 4.0 and higher

## 3. Notes

The USB flash drive may not function correctly if it is connected to the computer when the computer is started up, restarted, or restored from sleep mode. Always disconnect the USB flash drive from the computer before performing any of these operations.

Do not place the drive at locations that are:

- extremely hot or cold
- vibrating
- exposed to corrosive gases
- dusty or dirty
- very humid
- exposed to direct sunlight

Power consumption in standby mode: < 100 mA.

Our product warranty is limited only to the USB flash drive itself, when used normally in accordance with these operating instructions in the specified or recommended system environment. Services provided by the company, such as user support, are also subject to these restrictions.

The company cannot accept liability for damage or loss resulting from the use of this unit, or for any claim from a third party.

## 4. Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into two materials: cardboard (hang card) and plastic (tray holding the USB flash drive in position). The whole product packaging consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials and old equipment.



This symbol on packaging signifies that the producer has made a financial contribution towards the recovery and recycling of packaging.

### Disposal of your old product



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU and cannot be disposed of with normal household waste. We strongly advise you to take your product to an official collection point. Inform yourself about the local separate collection system for electrical and electronic products. Follow local rules and never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.



## 5. Compliance

### Compliance with CE



This symbol means that the product is compliant with health, safety, and environmental protection standards for products sold within the European Economic Area. The product is manufactured in accordance with provisions imposed by EMC (Electromagnetic Compatibility) and RoHS (Restriction of Hazardous Substances) Directives. To minimize the environmental impact and take more responsibility to the earth we live, the product complies with the restriction of SVHC (Substances of Very High Concern) and REACH (Registration, Evaluation, Authorization, and Restriction of Chemicals) regulated by the European Union.

### Compliance with FCC



The device complies with the FCC rules, Part 15. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit that is different from that to which the receiver is connected. Consult the dealer or an experienced radio or television technician for help.

Canada:

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

## Social Compliance

The manufacturer of this product is certified with RBA standard (Responsible Business Alliance). This means that this product is designed and produced in the community that adheres to ethical sustainability and endeavors to protect the health, safety, and rights of the employees and environment in which they operate. The producer follows the rules based, among others, on the United Nations' International Labor Organization (ILO) 'code of conduct' and the Human Rights Declaration. The main principles affiliated with the social compliance include:

- no discrimination
- no child labor
- legal minimum wages
- protection on the number of hours people have to work
- no forced labor
- safe working environment
- measures against corruption

Having the Philips product manufactured in compliance with social sustainability values, where high standards are required of the supplier, helps contribute to the people involved in production of the product being treated fair, with dignity and respect.



Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product is manufactured by and sold under the responsibility of MDD Hong Kong Holding Limited or one of its affiliates, and MDD Hong Kong Holding Limited is the warrantor in relation to this product.

UM\_ FM32DC152B/00\_EN ver210511